

TASCAM® Model 12

List of controls that can be used with the following DAW's

Yes	☐
No	---

	LIVE	Pro Tools	Cubase	CAKEWALK	Logic Pro	Digital Performer
F2  button (DAW CONTROLLER MARKER screen)	☐	☐	☐	---	---	---
F3  button (DAW CONTROLLER MARKER screen)	☐	---	☐	☐	---	☐
F4  button (DAW CONTROLLER MARKER screen)	☐	---	☐	☐	---	☐
F2  button (DAW CONTROLLER TRACK screen)	☐	☐	☐	☐	☐	☐
F3  button (DAW CONTROLLER TRACK screen)	☐	☐	☐	☐	☐	☐
F4  button (DAW CONTROLLER TRACK screen)	☐	☐	☐	☐	☐	☐
MULTI JOG dial (locate function)	☐	☐	☐	☐	☐	---
◀◀/▶▶ buttons	☐	☐	☐	☐	☐	☐
■ button	☐	☐	☐	☐	☐	☐
▶/II button	☐	☐	☐	☐	☐	☐
● button	☐	☐	☐	☐	☐	☐
PAN knobs (1-6, 7/8-9/10)	☐	☐	☐	☐	☐	---
REC buttons (1-6, 7/8-9/10)	☐	☐	☐	☐	☐	☐
MUTE switches (1-6, 7/8-9/10)	☐	☐	☐	☐	☐	☐
SOLO switches (1-6, 7/8-9/10)	☐	☐	☐	☐	☐	☐
Channel faders (1-6, 7/8-9/10)	☐	☐	☐	☐	☐	☐
FX fader (master fader control)	☐	---	☐	---	☐	☐
Model 12 DAW Control Mode Manual (You can access the page by clicking on it)	Page 7~8	Page 9	Page 10	Page 11~12	Page 12~13	Page 14